

Instruction Manual

For the SpeedWatcher GI & GX

Installation Instruction:

- Mount the **SpeedWatcher** on the dashboard, as close as possible to where the windshield meets the dashboard.
- Plug the unit into a cigarette lighter outlet and watch as the unit goes through an initialization process which includes:
 1. Testing the display
 2. Acquiring the almanac (GPS satellite data). This takes about 3 minutes.
- The SpeedWatcher has three power states:
 1. On
 2. Standby
 3. Off

Please note that the **SpeedWatcher** maintains its almanac as long as the power is **On** or in the **Standby** state. The unit will revert to **OFF** state if it is unplugged from the cigarette lighter outlet or in some vehicles, if the ignition is turned off.

- The **SpeedWatcher** goes into **Standby** state after 8 seconds of no motion.
- The **SpeedWatcher** will “wake up” instantly when motion resumes.

Operating Instruction:

To get the most out of the **SpeedWatcher**, read the following instruction carefully.

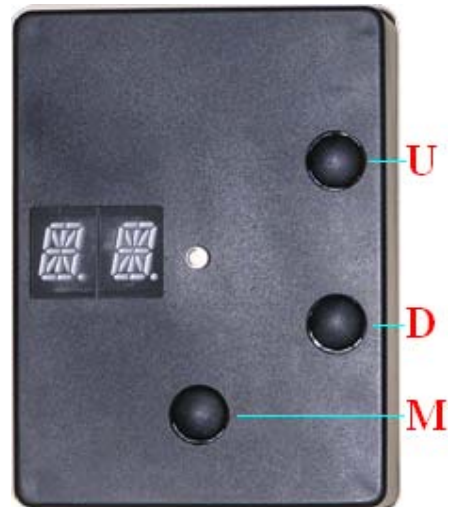
- The **SpeedWatcher** comes preset to 55MPH.



To get the most out of the **SpeedWatcher**, read the following instruction carefully.

- The **SpeedWatcher** comes preset to 55MPH.

The digital readout on the **SpeedWatcher** can:

1. Display Current Speed
 2. Display Moving Direction
 3. Display Speed Limit Setting
 4. Provide prompts for the Lockout Key Code entering
- To switch between Current Speed display and Moving Direction display, click on the **M** (**Mode**) button.
 - To reveal the current set speed limit, click once on the **U** (**Up**) or **D** (**Down**) button. That also puts the unit in the *Set Speed Limit* mode.
 - To increase the speed limit setting, click on the **U** (**Up**) button until desired speed shows.
 - To decrease the speed limit setting, click on the **D** (**Down**) button until desired speed shows.



- The selected speed will remain in memory even while the unit is in **standby** state.
- Setting the speed limit is in increments of 5 MPH, if you want to set it to 68 MPH for example, click on the **U** button until 65 will show on the display, click on the  **M** button while still in *Set Speed Limit* mode, until the display show .
- The **SpeedWatcher** will return to the last display mode automatically 8 seconds after the last clicked button.
- Your **SpeedWatcher** comes with key lock feature. This feature enables you to disable the Up and Down buttons once you set the speed limit.
- Locked unit will display LK when the Up or Down buttons are pressed.
- To enable or disable the Up and Down buttons, enter the Key Code you received with the unit.
- The key lock feature is designed to prevent others from changing the set speed limit. It is NOT necessary for the owner of the vehicle to use this feature.
- To optimize the use of this feature, it is advisable to hard wire (permanently wire) the unit to the vehicle's power.

Lockout Key Code Code Entry:

The sequence of entering code is as follows:

1. Press the Mode button until the display shows two dots (the **SpeedWatcher** will remain in Lockout Key Code mode automatically after you clicked on buttons eight times).



- The display will then prompt you to enter the 1st button
2. Enter your first key code by clicking on the (M, U or D buttons)



The display will then prompt you to enter the 2nd button




3. Enter your second key code by clicking on the (M, U or D buttons)



This will continue until all the 8 key code buttons are entered.

At the end, the display will show either  for Lock or  for Unlock.

Failure to enter the correct code will show  and it will be discarded.

